



Sharpening Instructions

You need:

Something to fix your axe, vice or work-bench, grinding stone and leather-gloves for your safety.

Never sharpen an axe on a high-speed rotating grinding device – the heat will „burn“ and destroy the axe edge.

Grind your axe on a slowly rotating grindstone or use our **Müller double-surface grinding stone**.

(Grain 120/rough side – 320/smooth side)

Start with rough side(120), put some water on and move the axe with slow motion on the grindstone in direction against cutting edge. Continue till all damage is grinded away on both sides.

Now put some water on the smooth side(320) and with rotating movement grind your axe from one edge to the other. Continue this procedure on each side.

The cutting-edge should be crowned(see picture Ⓐ), this will guarantee long-lasting use.

For frozen wood crowned grinding should be increased.

If cutting-edge is pointed triangular(see picture Ⓑ) the axe will stick in the wood and you risk cracking.

It is helpful to chalk or mark the cutting-edge, so you will see exactly where to grind.

We wish successful grinding – with perfectly crowned cutting-edge you will achieve top wood-chopping results according to our motto:

good cutting-edge – easy work !

